CRIMESTOPPER

CS-2900DP-FM

2-Way Infinity™

REMOTE *OPERATION INSTRUCTIONS*

INTRODUCTION

CONGRATULATIONS on your choice of the Infinity™ *with 2-Way Data Port (DP) technology by Crimestopper Security Products Inc.*

This device complies with FCC Rules part 15. Operation is subject to the following two conditions: 1) This device may not cause interference, and (2) this device must accept any interference that may be received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. Such modification could void the user's authority to operate the equipment.

CONTACT INFORMATION:
TECHNICAL SUPPORT (800)-998-6880
Monday - Friday 8:00am - 4:30pm Pacific

Website: www.crimestopper.com
E-mail: techsupport07@crimestopper.com

CRIMESTOPPER SECURITY PRODUCTS INC.
1770 S. TAPO STREET
SIMI VALLEY, CA. 93063 **REV. A 1.2007**

Button 5
1st Car / 2nd Car
Main Manu

Button 1
Lock

Button 2
Unlock

Button 3
1st Aux. Output

Button 4
Remote Start

BASIC TRANSMITTER OPERATIONS:

Button 1	**ARM / PANIC:** (press and hold for 3 sec. for Panic)
Button 2	**DISARM:** (Unlock driver door) / Press again within 4 to 15 sec. to unlock passenger doors
Button 3	**1st AUX. OUTPUT**: Press 1 sec. (Trunk-Pop)
Button 4	**REMOTE START:** Press 2 sec.(press again to turn off the engine)
Button 1+2	**A) WHEN ARMED:** Press 3 sec. to By-Pass All Sensors (Shock & Warn-A-Way)
Button 1+2	**B) WHEN DISARMED:** Valet Mode, Press 3 sec. / Valet Park Mode, Press again for 3 sec.
Button 1+3	**REMOTE CAR-JACK MODE:** Press 3 sec.
Button 2+4	**SILENT ARM / DISARM**
Button 2+3	**2nd AUX. OUTPUT:** Press 3 sec
Button 1+4	**3rd AUX. OUTPUT:** Programmable for Momentary, Timed or Latched. (see option table)
Button 3+4	**4th AUX. OUTPUT:** Programmable for Momentary, Timed or Latched. (see option table)
Button 5	**A) 1st CAR / 2nd CAR (FLIP FLOP)**
Button 5	**B) MAIN MENU**

2-Way Infinity™
DETAILED BUTTON OPERATION

1) Press any button to turn on LCD backlight and display Desktop.

I

2) Press Button (5) ONCE to activate 1st Car Function.

1st Car function activated, wallpaper for 1st Car will be displayed

There are 8 background colors available for 1st Car.

II

3) Press Button (5) AGAIN to activate 2nd Car Function:

OR - Press and hold until 2 beeps.

2nd Car function activated, The 2nd Car Light Blue background will be displayed.

CLOCK SET
TEMP SET/
PERIOD SET
DAILY START
BACKLIGHT COLOR
BUZZER ON/OFF
TRIG RECORD

4) Press Button (5) the 3rd time to enter MAIN MENU:

OR - Press and hold until 3 beeps.

Main Menu is showing.

Basic Button Operation in Main Menu

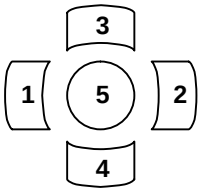

1. (5) **MAIN MENU**
2. (1) **BACK (CANCEL)** / (2) **ENTER (OK)**
3. (3) **SCROLL UP** (4) **SCROLL DOWN**

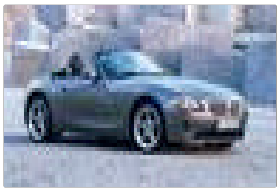

5) To Exit MAIN MENU

Press [1] **to exit, Desktop will be displayed.**

CLOCK ADJUST **08 : 00**

6) CLOCK ADJUSTMENT

Press [2] **to enter CLOCK ADJUST.**

Press [3] [4] **to adjust HOUR up or down.**

Press [2] **to SET the HOUR.**

CLOCK ADJUST **00 : 14**

Press [3] [4] **to adjust MINUTE.**

Press [2] **to SET and exit to MAIN MENU.**

7a) TEMPERATURE & TIME ADJUSTMENT – TEMPERATURE

TEMP SET **-10 C / 14 F**

Press [2] **to enter TEMP & TIME ADJUSTMENT.**

Press [3] [4] **to SELECT desired Temperature setting.**

Temperature Range: -10 C / 14F -20C / -4F -25C / -13F -30C / -22F -35C / -31F

Press [2] **to CONFIRM Temperature setting and go to Time Interval setting.**

7b) TEMPERATURE & TIME ADJUSTMENT – TIME

INTERVAL **01 Hour**

Press [3] [4] **to SELECT desired Time Interval setting.**

*** Time Interval Selection Range: 1 hr 2 hr 4 hr 6 hr 8 hr 12 hr**

Press [2] **to CONFIRM Time Interval setting.**

Upon completion, Buzzer will Beep 3 times and transmitter display shows "ICON" indicating setting status.

8) DAILY-START ADJUSTMENT

DAILY START

06 : 00

Press 2 **to enter DAILY-START ADJUSTMENT.**

This setting will allow you to select a specific time in the day for your vehicle to automatically start.

Press 3 4 **to adjust HOUR.**

Press 2 **to SET the HOUR.**

DAILY START

00 : 30

Press 3 4 **to adjust MINUTE.**

Press 2 **to SET and exit to MAIN MENU.**

Daily Start will only start the vehicle ONCE a day at your desired time.

The transmitter will display a "CLOCK ICON" indicating setting status.

9) BACKLIGHT COLOR ADJUSTMENT

BACKLIGHT COLOR

07

There are 8 background colors available for 1st Car.

Press 2 **to enter BACKLIGHT COLOR SET.**

Press 3 4 **to adjust to your desired LCD Backlight Color.**

Press 2 **to CONFIRM LCD Backlight Color and exit to MAIN MENU**

10) BUZZER ON/OFF ADJUSTMENT

BUZZER

ON

Press 2 **to enter BUZZER ON/OFF ADJUSTMENT.**

Press 3 4 **to turn ON/OFF the Transmitter Chirping..**

Press 2 **to CONFIRM Transmitter Chirping and exit to MAIN MENU**

The transmitter will display a "SILENCE ICON" indicating setting status.

11) LAST 3 ALARM TRIGGERS DISPLAY

10/15/06 10:50PM
11/06/06 05:17PM
11/25/06 07:49AM

Press 2 **to enter LAST 3 ALARM TRIGGERS DISPLAY.**

Press 3 4 **to browse the Last 3 Alarm Trigger records..**

Press any other buttons except Button 3 & 4 to exit to MAIN MENU.

This record cannot be deleted. It will be over-written when new triggers are received.

CHANGING THE BATTERY

The Infinity remote uses a standard 1.5 volt AAA battery. The battery power is displayed by 4 bars on the lower left corner of LCD display. See next page. You will see only 1 or 2 bars on the LCD screen when it is time to replace the AAA battery. You may have reduced range with a low battery when arming and disarming your system. To replace the battery, simple unlatch and slide open the battery door on the back of the 2-Way LCD remote. Carefully insert a new battery, using the outline on the bottom of the battery compartment as a guide. Your remote will play a musical tone if the battery was inserted correctly.

REMOTE AUX OUTPUT 2, 3 and 4

(Optional, requires special programming)

This system contains three extra auxiliary outputs to activate other accessories or devices. These outputs are programmable for: momentary ½ second, momentary push and hold, timed (1 to 255 seconds) or a latched ON/OFF function. See button chart for operation. There is no LCD/pager confirmation for Aux. 2/3/4 output.

COLOR MONITOR PANEL FUNCTION CHART

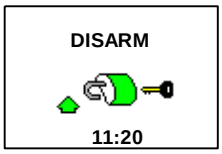

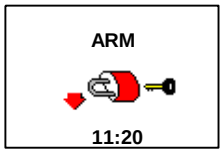

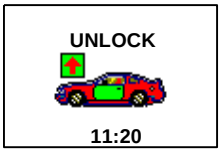

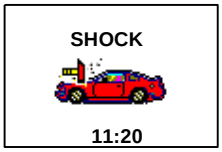

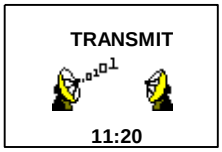

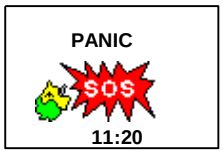

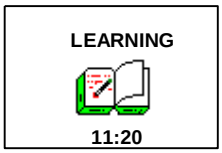

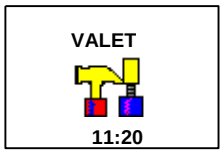

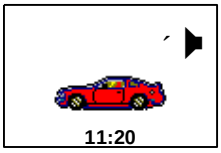

Car Chirp OFF

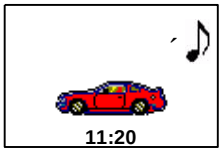

Remote Chirp Defeat

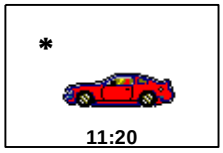

Temperature ON

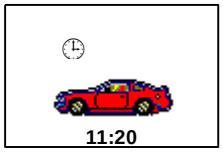

Daily Start ON

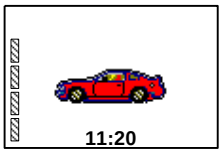

Battery Indicator

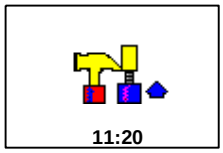

Valet unlock

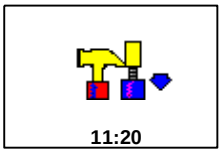

Valet lock

ONLINE TECHNICAL SUPPORT

www.crimestopper.com

Crimestopper Security Products Inc.
1770 So. Tapo Street
Simi Valley, CA 93063
(800) 998-6880
www.crimestopper.com
email@crimestopper.com
©2007 Crimestopper Security Products